



**IMPORTANT:** Please read the ENTIRE instructions before beginning. This Deck Mount Step Flashing Kit **MUST** be installed with the Kennedy Deck Mount Skylight in order to qualify for the Lifetime Warranty. Failure to follow the instructions will void the Warranty.

LIMITED  
**LIFETIME**  
WARRANTY  
TRADITIONAL SKYLIGHTS


INSTALLATION SHOULD ONLY BE COMPLETED BY INDIVIDUALS SKILLED WITH THE NECESSARY TOOLS FOR INSTALLATION. IF YOU DOUBT YOUR SKILLS, PLEASE CONSULT A QUALIFIED INSTALLER.

### Kennedy Step Flashing Kit Components:

- A.** (1) Head Flashing 3 3/4" x 10" x 34"
- B.** (2) Head Step Flashing Corner 3 3/4" x 6" x 9"
- C.** (18) Step Flashings 3 3/4" x 6" x 9" (number needed will vary on skylight size)
- D.** (2) Sill Step Flashing Corners 3 3/4" x 6" x 9"
- E.** (1) Sill Flashing 3 3/4" x 6" x 34"


### Materials and Tools Needed:

- Kennedy Deck Mount Skylight
- Caulking Gun
- Common Nails
- Hammer
- Phillips Head Screwdriver
- Roofing Nails
- Safety Glasses
- Sealant
- Tin Snips

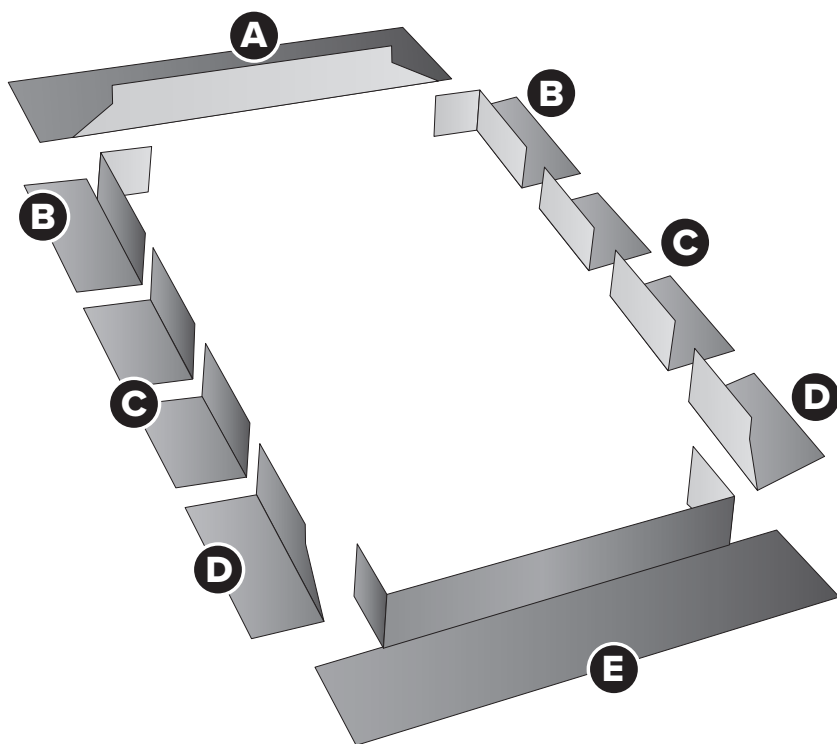


### USING A 2" DECK MOUNT?

If using a 2" deck mount skylight, **ALL** flashing pieces **MUST** be cut down to a height of 1 3/4" using tin snips. Use caution when handling sharp edges of cut pieces.

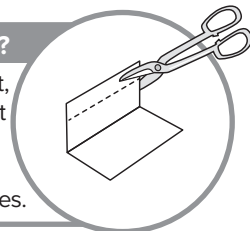


**NOTE:** This Deck Mount Step Flashing installation instructions should be used along with the installations instructions that came with your Kennedy Deck Mount Skylight. Please refer to those instructions for additional installation steps.

**CAUTION:** Do NOT use step flashing on tar and gravel roof installations.

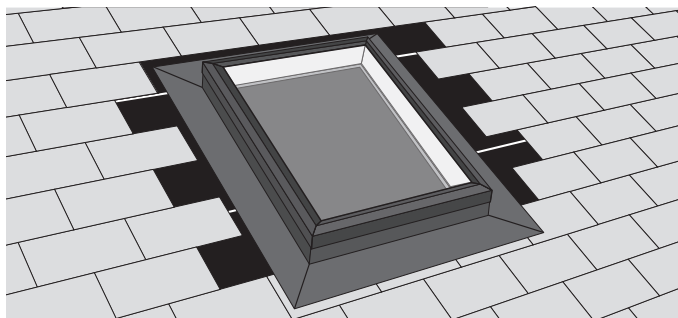


### STEP ONE - INSTALL DECK MOUNT SKYLIGHT

Apply a liberal amount of sealant to roof felt paper all around the rough opening. Carefully center skylight into place. Using pre-punched holes in flange, secure to roof deck. (Please refer to installation that came with your skylight for additional info.)

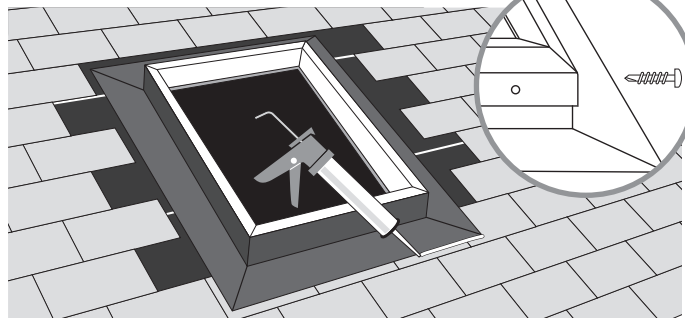


### STEP TWO - REMOVE GLASS SASH

Using a Phillips head screwdriver, remove all screws holding the glass sash to the skylight curb. Keep all screws in a safe place. Caulk all seams around the deck mount flashing liberally with sealant.

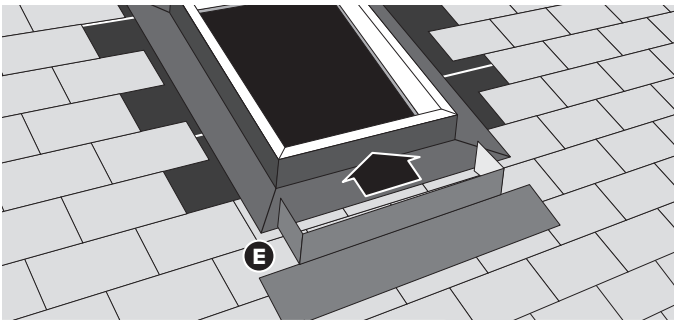


### STEP THREE - INSTALL SILL FLASHING

Place the sill flashing (E) so it rests on top of shingles. Nail the sill flashing to the roof decking. Do not nail through the skylight deck mount flashing.

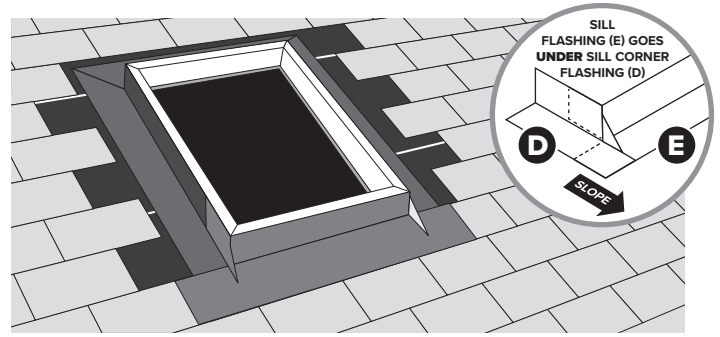


### STEP FOUR - INSTALL SILL STEP FLASHING CORNER

Line up the top edge of the sill step flashing corner (D) with the edge of the skylight curb so that the angle points down the roof slope. Secure with nails to the roof deck. Replace shingles but do NOT nail through sill flashing.

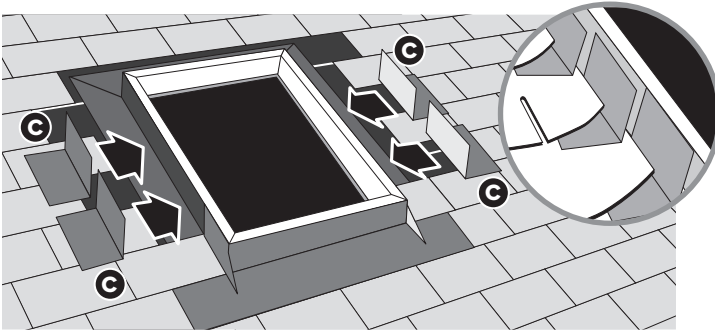


### STEP FIVE - INSTALL STEP FLASHING

Install the step flashing pieces (C) on both sides of the curb using a **minimum overlap of 2 1/2"**. Work your way to the top interweaving each step flashing with a roof shingle. Leave room at the very top for the head step flashing corner installed in Step Six.

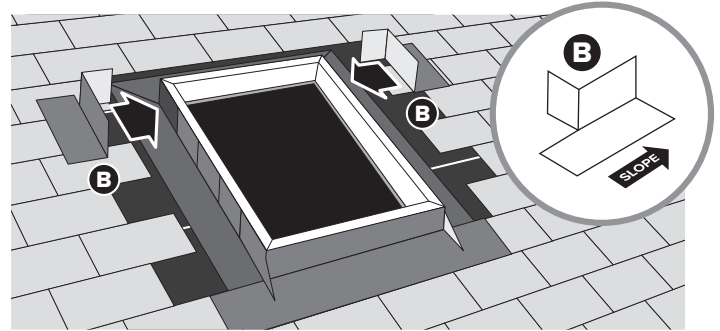


### STEP SIX - INSTALL HEAD STEP FLASHING CORNER

Place head step flashing corners (B) over the skylight curb corners and nail to roof deck. Replace shingles over head flashing corners but do NOT nail through flashing.

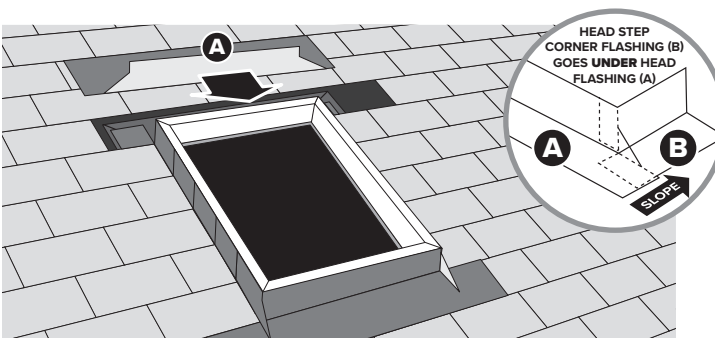


### STEP SEVEN - INSTALL HEAD FLASHING

Place head flashing (A) at the top of the skylight curb so that it sits OVER the lip of the head flashing corner (B). Nail to roof deck. Replace shingles over head flashing but do NOT nail through head flashing.

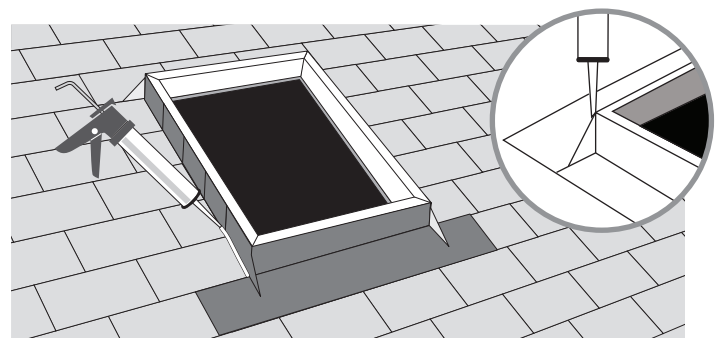

### STEP EIGHT - SEAL SEAMS

Caulk all seams, joints and exposed nail heads with sealant, especially at all four corners.

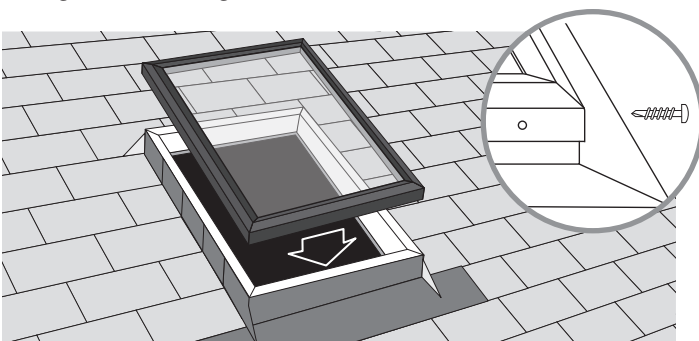

### STEP NINE - INSTALL KENNEDY SKYLIGHT

Carefully place the glass sash over the skylight curb and secure by replacing screws removed in Step One.